




## **TOYOTA HI-LUX : OVER-FENDER KIT.**

**PLEASE READ THIS INSTRUCTION CAREFULLY BEFORE FITMENT.**

1. PLACE RELEVANT TEMPLATE ONTO FENDER AND MARK HOLE POSITION.
2. TEMPLATES MUST BE ALIGNED FLUSH WITH THE BOTTOM OF FENDER LIP (RELATIVE EDGES) AND ENSURE ARROW POINTS TO FRONT OF VEHICLE.
3. DRILL HOLES DIAMETER 8,0mm WHERE MARKED FROM TEMPLATE.
4. PUSH RELEVANT OVER-FENDER WITH MOULDED-IN BOLTS THROUGH THE MATCHING HOLES DRILLED IN THE FENDER.
5. PLACE WASHER AND NUT ONTO EACH BOLT, AND HAND TIGHTENING NUTS.
6. TIGHTEN NUTS WITH SOCKET (DO NOT OVER-TIGHTEN).

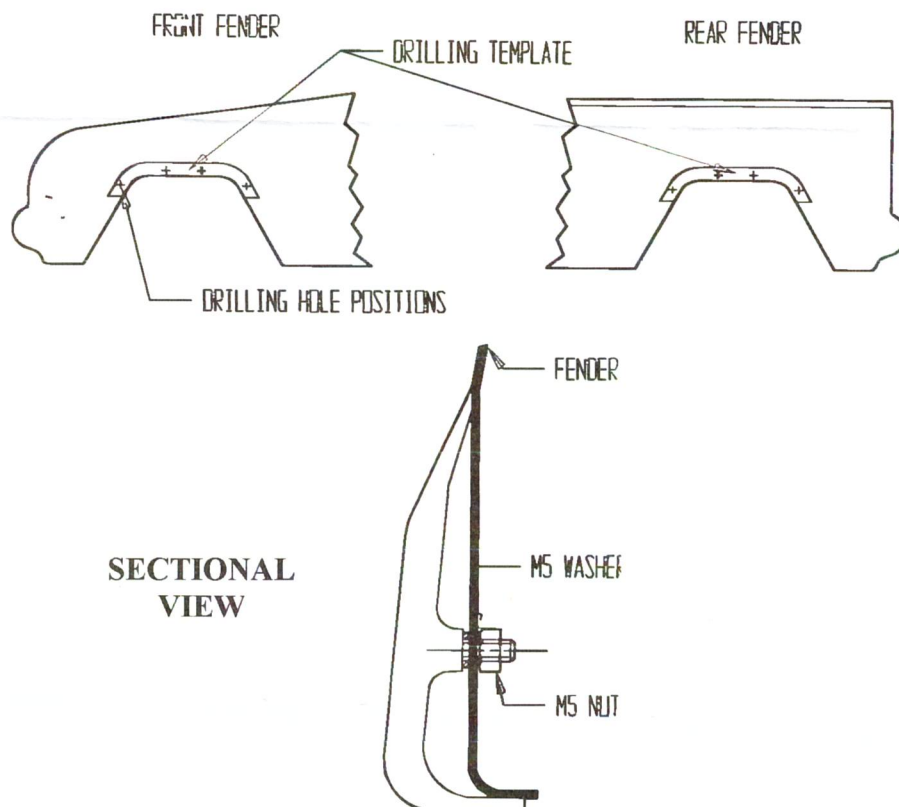

**KIT CONTENT (FOR 4 x OVER-FENDERS: - 2x FRONT + 2x REAR).**

1. M5 NUTS: 16 off.
2. M5 WASHERS: 16 off.
3. DRILLING TEMPLATES: 4 off (2x FRONT + 2x REAR).